

Limit Switch Location

X-Axis



Y-Axis



Z-Axis



Limit Switch Active (machine position is triggering limit switch)

X-Axis



Y-Axis




Z-Axis



Limit Switch Inactive (machine position IS NOT triggering limit switch)

X-Axis

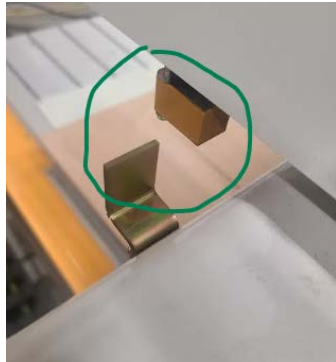

Y-Axis



Z-Axis

